


SYNTECH II (ALL MODELS)

DASH MOUNT

Notes:

- A: For internal speaker operation, pins #5 and #6 are jumpered.
- B: For external speaker operation, remove pins #5 and #6 along with the jumper wire. Using Molex .062 male pins, the external speaker is connected to pins #4 and #6.
- C: For carrier squelch systems, or for using CTCSS operation where the "Monitor" button is to be used on the radio front panel, and mic hang-up box is not used, pins #2 and #3 are jumpered.
- D: For CTCSS operation, using a mic hang-up box, remove the pins #2 and #3 along with the jumper wire. Using Molex .062 male pins, the mic hang-up box is connected to pins #2 and #3.
- E: Pins #10 and #11 should also be jumpered. (If using ignition sense, leave this jumper out and connect ignition 12V to pin #11.)

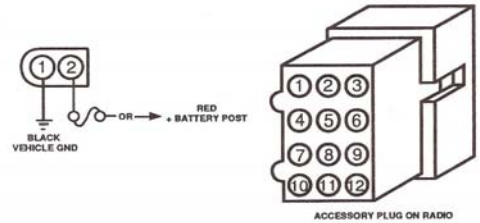


TRUNK MOUNT

RADIO UNIT

Notes:

- A: Jumpers should be used between pins #2 and #3, pins #5 and #6, and pins #10 and #11.

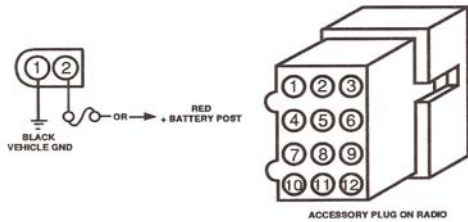

CONTROL HEAD

Notes:

- A: The external speaker is connected to pins #4 and #6, using Molex .062 male pins.
- B: Follow dash mount instructions for pins #2 and #3, above.
- C: Jumper between pins #10 and #11. (If using ignition sense, leave this jumper out and connect ignition 12V to pin #11.)

