

## XTR (8 CHANNEL MODELS)

### Notes:

A: For internal speaker operation, pins #5 and #6 are connected as shown.

B: For external speaker operation, remove pins #5 and #6 along with the jumper wire. Using Molex Mini-Fit Jr. female pins, the external speaker is connected to pins #4 and #6.

C: For carrier squelch systems, or for using CTCSS operation where the "Monitor" button is to be used on the radio front panel, and mic hang-up box is not used, pins #2 and #3 are connected as shown.

D: For CTCSS operation, using a mic hang-up box, remove the pins #2 and #3 along with the jumper wire. Using Molex Mini-Fit Jr. female pins, the mic hang-up box is connected to pins #2 and #3.

